



Office & Showroom

Shanghai
Tel: (86) 21 6278 8888

Beijing
Tel: (86) 10 8521 7588

Guangzhou
Tel: (86) 20 3892 2422

Shenzhen
Tel: (86) 769 8203 1111 ext 31018

Dongguan
Tel: (86) 769 8203 1111

Hong Kong
Tel: (852) 2828 6888

Singapore
Tel: (65) 6817 8750

Service Hotline

Mainland China: (86) 800 820 6073 | (86) 400 686 8073

Hong Kong & Asia Pacific: (852) 2828 6000

分行及展厅

上海
电话：(86) 21 6278 8888

北京
电话：(86) 10 8521 7588

广州
电话：(86) 20 3892 2422

深圳
电话：(86) 769 8203 1111 ext 31018

东莞
电话：(86) 769 8203 1111

香港
电话：(852) 2828 6888

新加坡
电话：(65) 6817 8750

客户服务热线

中国大陆：(86) 800 820 6073 | (86) 400 686 8073


香港及亚太区：(852) 2828 6000

Array



INSTRUCTION



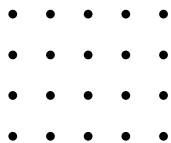

Array: Effortless Interaction

悦派：舒适之作 轻盈互动



a Headrest Adjustment

Shift headrest upwards or downwards into your most comfortable position to relieve head and neck pressure.

头枕调节

上下移动或转动头枕可让您 调节到最舒适的位置，从而舒缓头部和颈部的压力。



b Armrest Adjustment

To adjust armrest height, lift up on button and release into your desired position. To adjust armrest position, move the armrest forward or backward to lock placement.

扶手调节

需要调节扶手高度时，请按下扶手下方的按钮，当 调节至承托手臂舒适的高度位置时松开即可。当需要扶手前后调节时滑动扶手盖至适合您的前臂承托位置。



c Seat Depth Adjustment

To change seat depth, lift and hold the lever as you push the seat forward and backward. Release the lever to lock seat in place.

座椅深度调节

调节座椅深度时，扳动旋钮调节机关，身体向前或向后推动椅座至合适座深后，松开调节机关使椅座锁定在一个位置上。



d Tilt Tension Adjustment

Pull telescoping knob out and turn clockwise to increase tension, counter clockwise to reduce tension.

拉力调节

通过旋钮调节倾仰拉力强度，顺时针旋转为增加倾仰力度，逆时针旋转为减小倾仰力度。



e Tilt Lock

While sitting on the chair, turn the knob clockwise to lock into your comfortable position. Turn the knob counter clockwise to unlock.

倾仰角度锁定

当坐在椅子上时，顺时针转动手掣便可锁定在合适的倾仰角度，逆时针转动手掣可解除倾仰锁定。

