



Office & Showroom

Shanghai
Tel : (86) 21 6278 8888

Beijing
Tel : (86) 10 8521 7588

Guangzhou
Tel : (86) 20 3892 2422

Shenzhen
Tel : (86) 769 8203 1018

Dongguan
Tel : (86) 769 8203 1111

Hong Kong
Tel : (852) 2828 6888

Singapore
Tel : (65) 6817 8750

Service Hotline

Mainland China : (86) 800 820 6073 | (86) 400 686 8073

Hong Kong & Asia Pacific : (852) 2828 6000

分行及展厅

上海
电话 : (86) 21 6278 8888

北京
电话 : (86) 10 8521 7588

广州
电话 : (86) 20 3892 2422

深圳
电话 : (86) 769 8203 1018

东莞
电话 : (86) 769 8203 1111

香港
电话 : (852) 2828 6888

新加坡
电话 : (65) 6817 8750

客户服务热线

中国大陆 : (86) 800 820 6073 | (86) 400 686 8073


香港及亚太区 : (852) 2828 6000

Open Up



INSTRUCTION



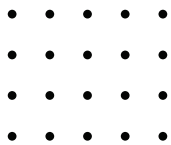

Open Up: Elevated Aesthetics

高尚大气 美学典范



a Headrest Adjustment

The angle of the headrest can be adjusted up and down, forward and backward, to desired neck position and relieve head and neck pressure.

可调节头枕

头枕的角度可以上下、前后调节至您所需的颈部位置，让颈部获得最佳支撑点并减轻头颈部的压力。



b 3D Armrest Adjustment

Adjust armrest by lifting up arm trigger and releasing into desired position: up and down, forward and backward, or pivot.

3D可调节扶手

通过按压扶手按钮调节至您所需的位置，然后松开按钮固定扶手位置。3D扶手可进行上下、前后或旋转角度的全方位调节。



c Seat Depth Adjustment

Adjust seat depth by pressing lever and sliding forward or back, releasing to lock into desired position.

可调节的座椅深度

调节座椅深度时，需按下操纵杆向前或向后滑动，松开操纵杆将其锁定至您所需位置。



Open Up is packed with multi-features, from optimum ergonomics to upgraded comforts.

从最佳的人体工学设计到更高的舒适度需求，Open Up 功能卓著，至臻至美。



d Tilt Tension Control

Adjust tension by pulling out telescoping knob and turning clockwise to increase, counterclockwise to decrease.

拉力调节

通过旋钮调节倾仰拉力强度，顺时针旋转为增加倾仰力度，逆时针旋转为减小倾仰力度。



e Seat Height Adjustment

Raise seat height by lifting weight and pulling on lever. Lower seat height by lifting on lever while seated.

可调节的座椅高度

起身并拉动操纵杆来提高座椅高度；坐下时抬起操纵杆，降低座椅高度。



f Lumbar Adjustment

Adjust lumbar up or down to your desired position, to provide tailored back support.

靠背调节

腰支撑可上下调节至您所需的位置，量身定制的有效贴合背部支撑。



g Synchronized Tilt Lock

Adjust tilt level at bottom-left of seat. Slide tilt level backward to your desired recline position, then lift up to lock.

同步倾仰锁定

通过座椅左下角的按钮来调整座椅椅背的倾仰角度。将调节手柄向后滑动让座椅倾仰至您所需的角度，同时提起调节手柄将位置锁定。

